

Set of 5 MFI-type strips (Castrol strips)

Each strip contains 3 longitudinal defects for verification of the direction of magnetization during the magnetoscopic check.

In accordance with the standards:

- ASME V art. 25 = ASTM E709 art. 13.7.1, appendix X1
- ASTM E3024 appendix A3

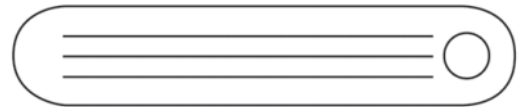


FIG. X1.1 The longitudinal lines represent the location of the slots cut into the center steel layer of either the General or Aerospace flexible laminated strips.

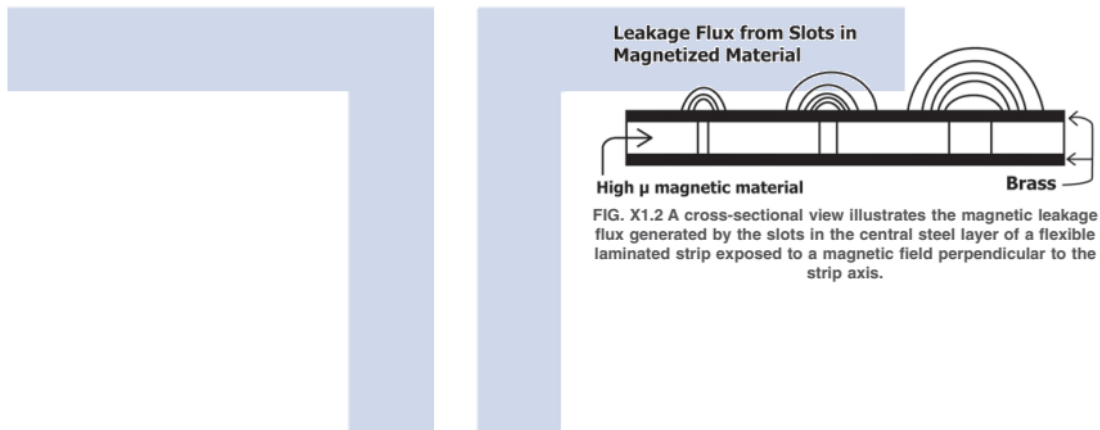


FIG. X1.2 A cross-sectional view illustrates the magnetic leakage flux generated by the slots in the central steel layer of a flexible laminated strip exposed to a magnetic field perpendicular to the strip axis.

