

UV-A Clarity Torch SPN-CLR365-SC

Torcia LED con supporto opzionale per bombolette spray

- ✓ Indice di protezione: IP68 resistente all'acqua e alla polvere
- ✓ Batteria ricaricabile al litio integrata con 9 ore di autonomia
- ✓ Ricarica a wireless: la lampada conservata nella base di ricarica si carica automaticamente: nessun connettore o necessità di togliere la batteria per la ricarica!
- ✓ Indicatore del livello di carica
- ✓ Corpo in alluminio anodizzato nero
- ✓ Compatta e leggera: 2,6x17,5cm e 360g

Distanza 38cm Irraggiamento: 4.500 $\mu\text{W}/\text{cm}^2$
Diametro irraggiato: 10 cm

Conforme a: ASTM E3022 (certificazione inclusa), Airbus AITM6-1001

(dichiarazione inclusa), EN ISO 3059, ASME V art.6, ASME V art.7, ASTM E1444 (opzionale, senza sovrapprezzo), ASTM E1417 (opzionale, senza sovrapprezzo).

Include: Lampada, Occhiali di protezione con filtro UV, Alimentatore wireless, Valigetta di trasporto.



CLARITY™ 365 SERIES
**HIGHEST QUALITY
LONGEST RUNNING
MOST CONVENIENT**
**COMPLIANT LED UV-A FLASHLIGHT
IN THE WORLD!**

- 9 HOURS RUN TIME!** vs. 2-3 hours from other lamps
- WIRELESS INDUCTION CHARGING*** vs. other lamps with offboard and dust ingestion
*Lithium Ion model only
- OUTPUT REGULATOR** vs. lamps that can fall out of compliance



LONG-LASTING UV-A LED PROTECTED BY LENS

UV-A PASS FILTER

INDUCTION CHARGER*
Stands on table, lamp is charged wirelessly
*Lithium Ion model only

CHARGING INDICATOR

RUGGED, DURABLE METAL HOUSING

RECHARGEABLE BATTERY

ALSO AVAILABLE IN ALKALINE BATTERY MODELS
SEE BACK FOR PART NUMBERS AND DETAILS



WHY CLARITY™?

- LONGEST BATTERY LIFE ON THE MARKET**
- AUTO SHUT-OFF**
Keeps Intensity Above Minimum Output
- WATER-PROOF, DUST-PROOF**
IP68 RATED
- WIRELESS CHARGER***
Induction Charger Kit Included
*Lithium Ion model only

CLARITY Spray Mount Accessory
RP-SM-01

Specially crafted lamp attachment permits lamp and spray can to be mounted together for convenient, single-handed fluorescent yoke inspection.

SPRAY & INSPECT IN ONE SIMPLE STEP!

CLARITY™ 365 SERIES

MODEL	NOMINAL STEADY-STATE UV-A (365 nm) INTENSITY at 15 in (38 cm) ①	VISIBLE LIGHT MEASUREMENT	UV-A COVERAGE DIAMETER at 15 in (38 cm) at minimum 1,000 $\mu\text{W}/\text{cm}^2$
SPN-CLR365-SC (Lithium-Ion Battery)	4,500 $\mu\text{W}/\text{cm}^2$	< 1 foot-candle (11 lux)	4 in (10.1 cm)
SPN-CLR-BA (Alkaline Battery)			



SPN-CLR365-SC (Lithium-Ion Battery)

Light Source:	(1) UV-A LED
Lamp Style:	Cordless Flashlight
Lamp Head Diameter:	1 in (2.6 cm)
Length:	7 in (17.8 cm)
Weight:	0.8 lbs (363 g) (with Battery)
Power Requirements:	Lithium-Ion Rechargeable Battery
Run Time:	9 hours (continuous)
Charge Time:	6 Hours

① UV-A intensity reading taken with the Spectroline® AccuMAX™ Series meter, and is factory set to the value shown

Includes:

Flashlight with battery, induction charging dock, AC power cord, USB power cord, belt holster, UV-absorbing spectacles, comes in carrying case.




UV-A Beam Profile

HIGH INTENSITY MODELS

SPN-CLR365-HC & SPN-CLR-BHA MODELS

Surface Contour Profile at 15 in (38 cm)

Top Intensity Profile at 15 in (38 cm)

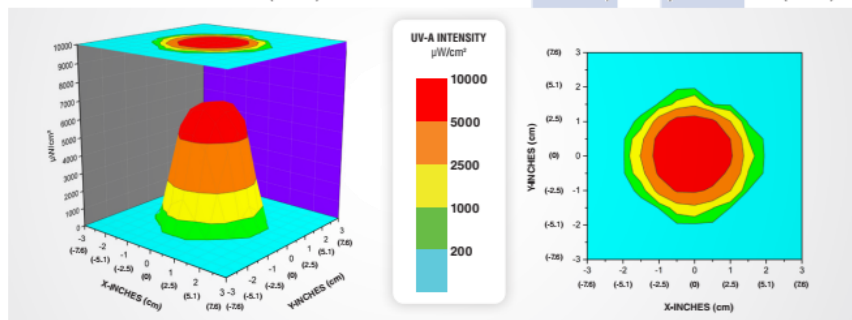


STANDARD INTENSITY MODELS

SPN-CLR365-SC & SPN-CLR-BA MODELS

Surface Contour Profile at 15 in (38 cm)

Top Intensity Profile at 15 in (38 cm)

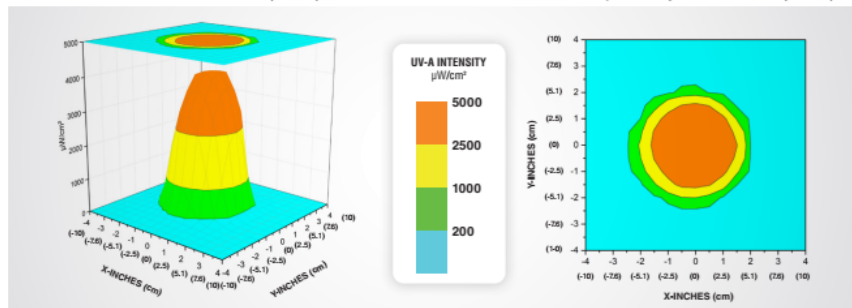

**CERTIFICATE OF
CONFORMANCE**
included with each lamp



CERTIFICATE OF CONFORMANCE

